



La technologie
pour les personnes
en situation
de handicap

FONDATION SUISSE POUR LES TELETHESES
STIFTUNG FÜR ELEKTRONISCHE HILFSMITTEL
FONDAZIONE SVIZZERA PER LE TELETESI


GyroMouse USB

Installation and user manual

Introduction

Thank you for choosing GyroMouse ! GyroMouse is a very simple to use computer mouse allowing the movement of a mouse cursor via its inclination in space. GyroMouse is a HID device, it is plugged in via a USB port to a computer and works instantly ! No additional installation is required, GyroMouse works on very existing platform that are compatible with a standard USB mouse.

GyroMouse presents itself as a small box attached to a standard USB cable (see figure shown). Inside is an accelerometer that measures the box's inclination. The more GyroMouse is tilted in one direction, the more the cursor on the computer screen will move in the same direction.

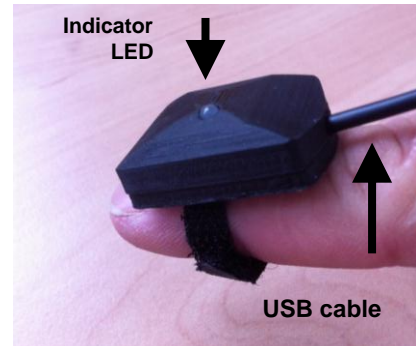

Usage

1. Place GyroMouse ideally on a flat surface such as a table with the indicator light (LED) facing up and the USB cable towards the user.
2. Plug in the USB cable to your computer then wait a few seconds. As soon as the operating system has detected GyroMouse, an auto calibration occurs where the current position is defined as «position zero» or «initial» (do not move GyroMouse during this step). The system is then ready to use (if not please contact your place of purchase).
3. Tilt GyroMouse in the desired position :
 - a. Left : to make the cursor move to the left
 - b. Right : to make the cursor move to the right
 - c. Forwards : to make the cursor move down
 - d. Backwards : to make the cursor move up
4. To click, put GyroMouse in «position zero» or «initial», then wait a few seconds. The indicator light (LED) blinks yellow then stays lit. This indicates you are in click mode, you then only need to tilt GyroMouse :
 - a. Left : to make a left click
 - b. Right : to make a right click
 - c. Forwards : to make a double click
 - d. Backwards : to make a drag & drop. Here the indicator light (LED) turns green and maintains a left click as long as GyroMouse is not brought back to «position zéro» or «initiale» for a few seconds.

Technical Specifications

- Warning : tempering with the box voids warranty
- The package « GyroMouse USB» contains : 1 x GyroMouse USB only (no software provided)
- Operating temperatures : between -40° and +85°
- Minimum power supply tension 2.3 volts, maximum 6 volts

www.fst.ch

FST Nottwil
Tél +41 41 939 62 80
flueckiger@fst.ch

FST Bâle
Tél +41 61 325 07 08
mueggler@fst.ch

FST Zurich
Tél +41 44 310 59 51
kemp@fst.ch

FST Lugano
p.a. Electrasim SA
Tél. +41 91 923 39 46




GyroMouse USB

Installation and user manual

Introduction

Thank you for choosing GyroMouse ! GyroMouse is a very simple to use computer mouse allowing the movement of a mouse cursor via its inclination in space. GyroMouse is a HID device, it is plugged in via a USB port to a computer and works instantly ! No additional installation is required, GyroMouse works on very existing platform that are compatible with a standard USB mouse.

GyroMouse presents itself as a small box attached to a standard USB cable (see figure shown). Inside is an accelerometer that measures the box's inclination. The more GyroMouse is tilted in one direction, the more the cursor on the computer screen will move in the same direction.

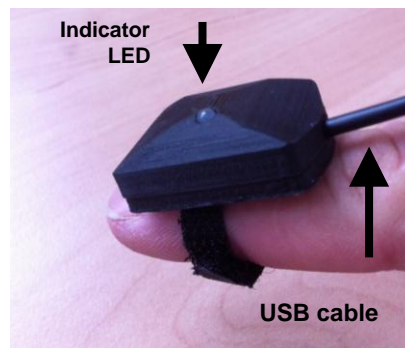

Usage

5. Place GyroMouse ideally on a flat surface such as a table with the indicator light (LED) facing up and the USB cable towards the user.
6. Plug in the USB cable to your computer then wait a few seconds. As soon as the operating system has detected GyroMouse, an auto calibration occurs where the current position is defined as «position zero» or «initial» (do not move GyroMouse during this step). The system is then ready to use (if not please contact your place of purchase).
7. Tilt GyroMouse in the desired position :
 - a. Left : to make the cursor move to the left
 - b. Right : to make the cursor move to the right
 - c. Forwards : to make the cursor move down
 - d. Backwards : to make the cursor move up
8. To click, put GyroMouse in «position zero» or «initial», then wait a few seconds. The indicator light (LED) blinks yellow then stays lit. This indicates you are in click mode, you then only need to tilt GyroMouse :
 - a. Left : to make a left click
 - b. Right : to make a right click
 - c. Forwards : to make a double click
 - d. Backwards : to make a drag & drop. Here the indicator light (LED) turns green and maintains a left click as long as GyroMouse is not brought back to « position zéro » or « initiale » for a few seconds.

Technical Specifications

- Warning : tempering with the box voids warranty
- The package « GyroMouse USB » contains : 1 x GyroMouse USB only (no software provided)
- Operating temperatures : between -40° and +85°
- Minimum power supply tension 2.3 volts, maximum 6 volts